



**220, 222, 224, 444,
226, 446, 448
TRACTORS**

SUPPLEMENT No. 8-55120

This supplement is to be used with the following operator's manuals:

220, 222, 224, 444 TRACTORS - No. 9-9790
226, 446, 448 TRACTORS - No. 9-9800

This supplement replaces the following information in the above manuals:

OPERATING INSTRUCTIONS, Page 6, Step 5, Figure 7
OPERATING INSTRUCTIONS, Page 16, Step 6 & 7, Figure 12

This supplement contains air cleaner precleaner washing and oiling instructions.

5. TRAVEL CONTROL LEVER

TO STOP TRAVEL: Put the travel control lever in the "NEUTRAL" position.

TO START FORWARD TRAVEL: Depress the travel control lever to clear the "NEUTRAL" position. Slowly and in small amounts move the travel control lever forward.

Speed and power will increase as the lever is moved toward the full "FORWARD" position.

TO START REVERSE TRAVEL: Depress the travel control lever to clear the "NEUTRAL" position. Slowly and in small amounts move the travel control lever rearward.

Speed and power will increase as the lever is moved toward the full reverse position.

DO NOT USE FULL SPEED IN REVERSE.

TO USE "RETARD" IN FORWARD OR REVERSE TRAVEL: "RETARD" is the hydraulic braking position for the travel control lever.

Put the travel control lever in the "RETARD" position when you go down a hill or incline.

See the Operating Procedure Section of this manual for a more complete description of "RETARD" use.

The travel control lever must be depressed to clear the "NEUTRAL" position.

Depress the travel control lever whenever you change the lever position to have smoother operation and control.

The travel control lever automatically returns to the "NEUTRAL" position when the brake is actuated. The travel control lever can be moved from the "NEUTRAL" position with the brake actuated.

A neutral start switch is actuated by the travel control lever. The lever must be in the "NEUTRAL" position before you can start the engine.

6. TO USE FORWARD TRAVEL:

- a. Depress the travel control lever to clear the "NEUTRAL" position.
- b. Depress the travel control lever and move it slowly and in small amounts from the "NEUTRAL" position toward the full "FORWARD" position.
- c. When you reach the correct speed, release the lever.
- d. Return the travel control lever to the "NEUTRAL" position to stop.
- e. Actuate the brake pedal if the "NEUTRAL" position does not stop the tractor.

7. TO USE REVERSE TRAVEL:

- a. Depress the travel control lever to clear the "NEUTRAL" position.
- b. Depress the travel control lever and move it slowly and in small amounts from the "NEUTRAL" position toward the full "REVERSE" position. Do not travel at full speed in reverse.
- c. Always keep your hand on the travel control lever when moving in reverse.
- d. Return the travel control lever to the "NEUTRAL" position to stop.
- e. Actuate the brake pedal if the "NEUTRAL" position does not stop the tractor.

Always be careful and look behind when you drive in reverse.

Do not travel in reverse down a hill or ramp. Use reverse travel to move up a hill or ramp. Always use forward travel when you come down a hill or ramp.

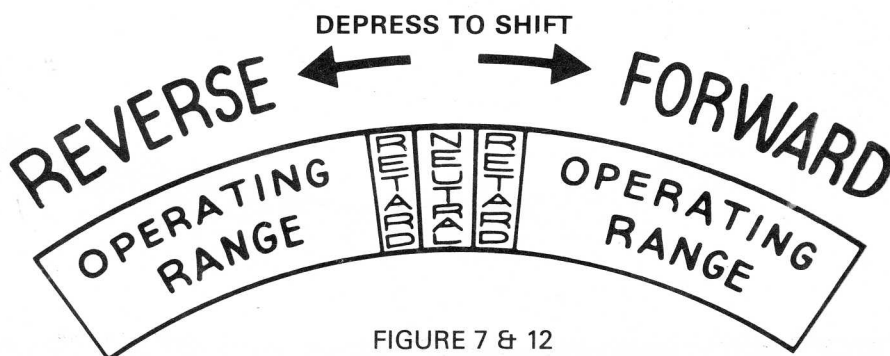


FIGURE 7 & 12

WASHING AND OILING INSTRUCTIONS FOR AIR CLEANER PRECLEANER (if used).

Carefully remove the precleaner from the paper filter element.

Wash the precleaner thoroughly in a solution of detergent and water. Squeeze the precleaner dry and allow it to air dry.

Apply three tablespoons (43 grams) of SAE 30 engine oil to the precleaner. Squeeze the precleaner gently to distribute the oil and remove excess oil.

Install the precleaner over the paper filter element.

Service the paper filter element according to the instructions found in the Maintenance Section of your operator's manual.

NOTE: The air cleaner is optional on models 220, 222, 224, 444 and standard on models 226, 446, 448.

1. WASH
2. SQUEEZE DRY
3. COAT WITH OIL
4. INSTALL OVER PAPER ELEMENT

