

How do I remove a hydraulic
pump from an Ingersoll 40
tractor?


No room to tap out with hammer


Ingersoll Tractor 4016

#17194210




Hydraulic Pump below overall view

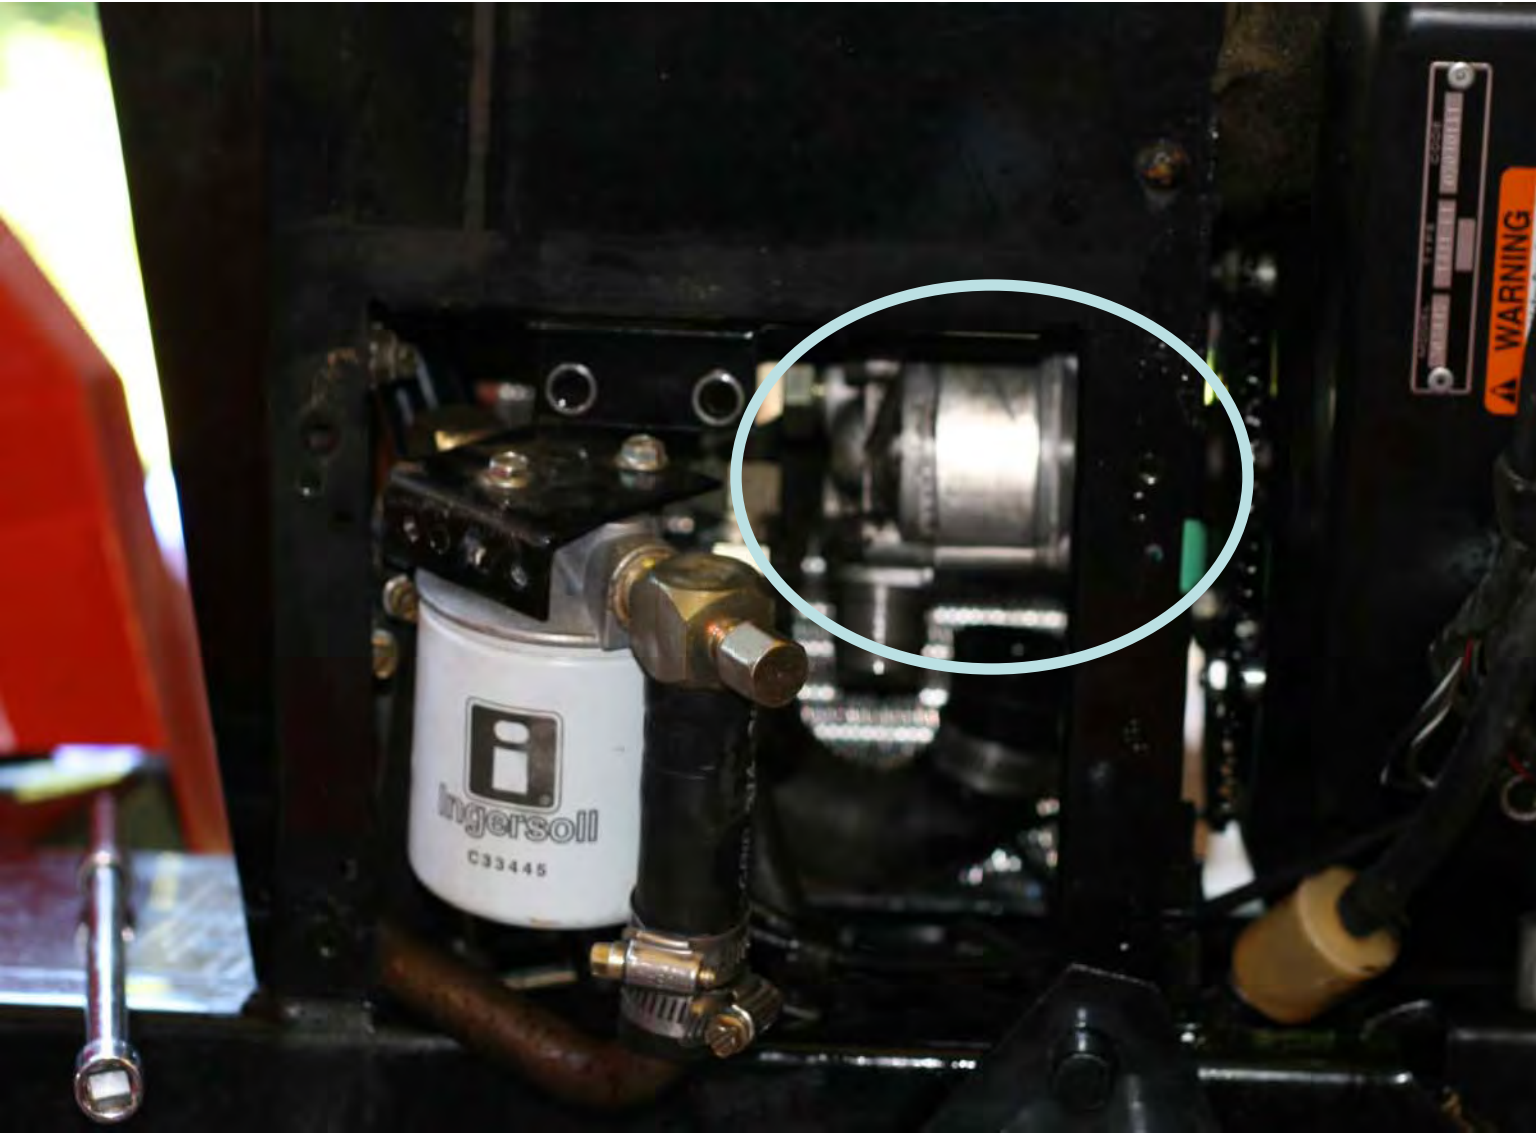

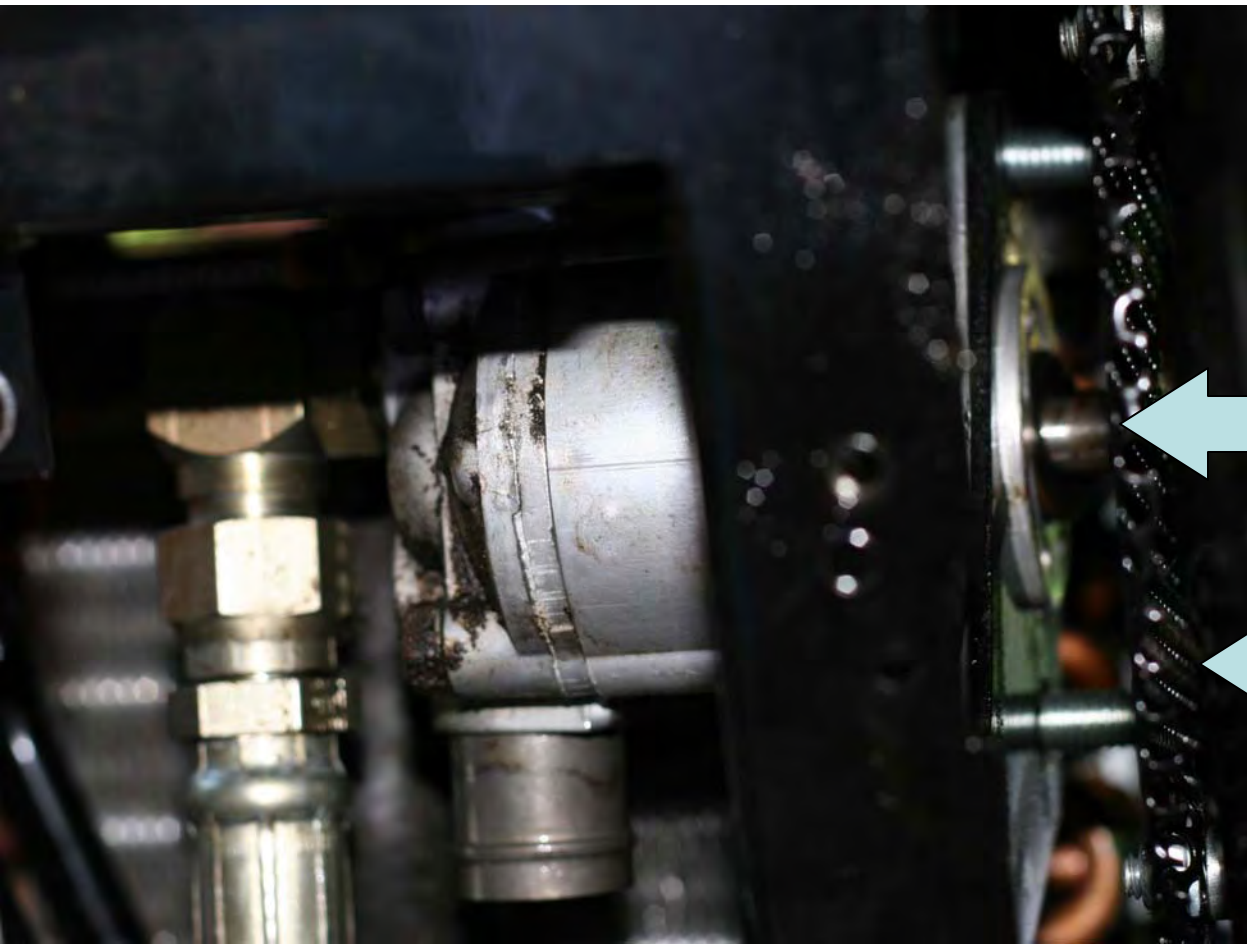


Shaft

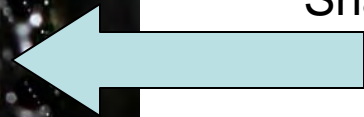

Engine
screen



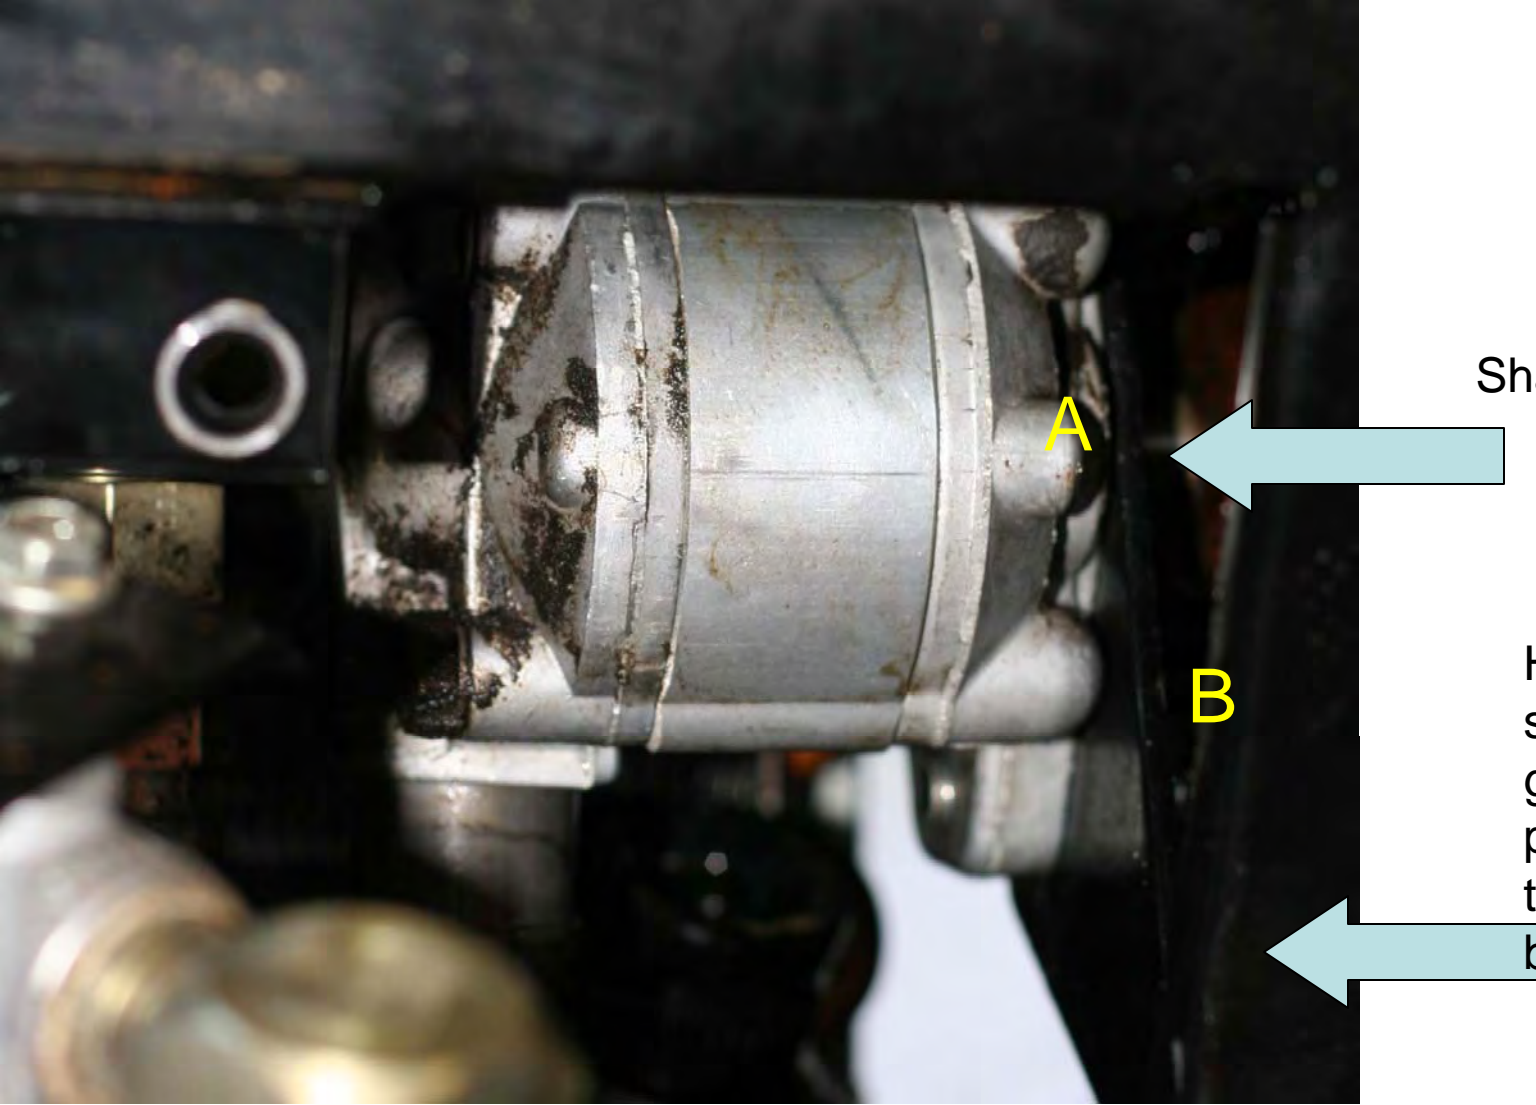

I am currently using, gently, a prybar against point A and